


AIRFLOW SEQUENCE DIAGRAM

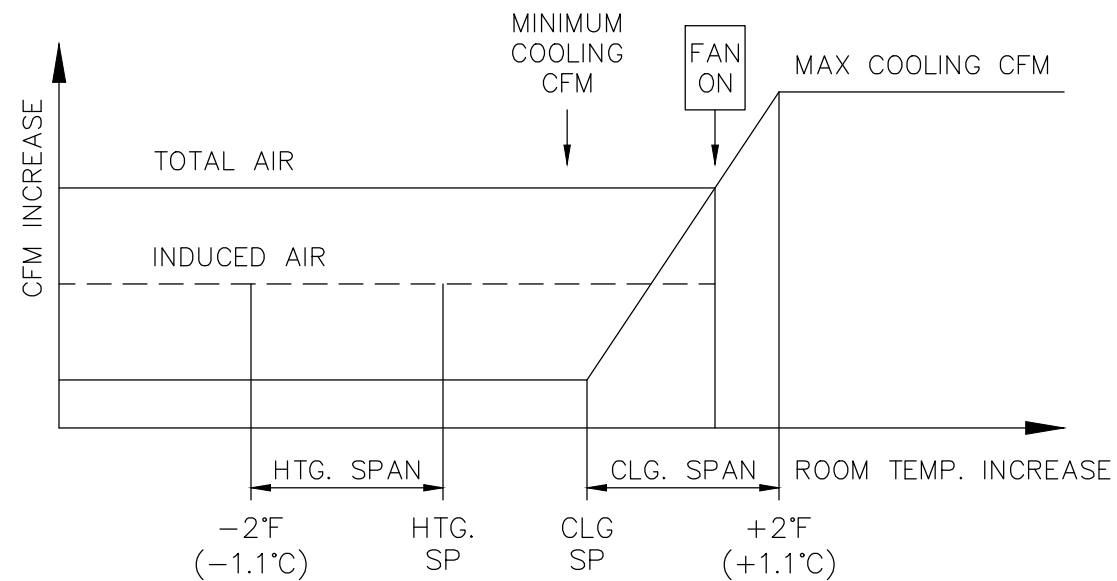

OCCUPANCY MODE:

THE AIR TERMINAL UNIT SHALL BE IN THE OCCUPIED MODE WHEN THE LOCAL SPACE OCCUPANCY INPUT(S) INDICATE THAT THE SPACE IS OCCUPIED OR WHEN THE INPUT FROM THE SYSTEM SCHEDULER IS OCCUPIED. THE AIR TERMINAL UNIT SHALL BE IN THE UNOCCUPIED MODE WHEN THE LOCAL SPACE OCCUPANCY INPUT(S) INDICATE THAT THE SPACE IS UNOCCUPIED AND THE INPUT FROM THE SYSTEM SCHEDULER IS UNOCCUPIED.

COOLING – OCCUPIED MODE:

THE FAN SHALL BE NORMALLY ON. UPON A RISE IN ZONE TEMPERATURE ABOVE ZONE TEMPERATURE SETPOINT, SUBJECT TO THE ZONE TEMPERATURE SETPOINT DEADBAND, THE AIRFLOW SETPOINT SHALL BE ADJUSTED BETWEEN MINIMUM AND MAXIMUM BASED ON THE DIFFERENCE BETWEEN ZONE TEMPERATURE AND ZONE TEMPERATURE SETPOINT. THE PRIMARY AIR DAMPER SHALL MODULATE TO MAINTAIN THE SUPPLY AIRFLOW AT SETPOINT AS MEASURED BY A MULTI-POINT FLOW SENSING ELEMENT AT THE INLET TO THE AIR TERMINAL UNIT.


HEATING – OCCUPIED MODE:

THE FAN SHALL BE NORMALLY ON. UPON A FALL IN ZONE TEMPERATURE BELOW THE ZONE TEMPERATURE SETPOINT WITH THE PRIMARY AIR FLOW RATE AT THE MINIMUM SETPOINT, SUBJECT TO THE DEADBAND AS SHOWN, THE ELECTRIC RESISTANCE HEATING COIL(S) SHALL BE TURNED ON AND MODULATE TO MAINTAIN THE ZONE TEMPERATURE SETPOINT.

HEATING – UNOCCUPIED MODE OR MORNING WARMUP:

THE FAN SHALL BE NORMALLY OFF. THE PRIMARY AIR DAMPER SHALL BE CLOSED. UPON A FALL IN ZONE TEMPERATURE BELOW THE ZONE TEMPERATURE SETPOINT, THE PARALLEL FAN SHALL BE TURNED ON AS THE FIRST STAGE OF HEAT. UPON A FURTHER FALL IN ZONE TEMPERATURE BELOW THE ZONE TEMPERATURE SETPOINT, THE ELECTRIC RESISTANCE HEATING COIL(S) SHALL BE TURNED ON AS THE SECOND STAGE OF HEAT AND MODULATE TO MAINTAIN THE ZONE TEMPERATURE SETPOINT.

MODULATION HEAT SEQUENCE DIAGRAM

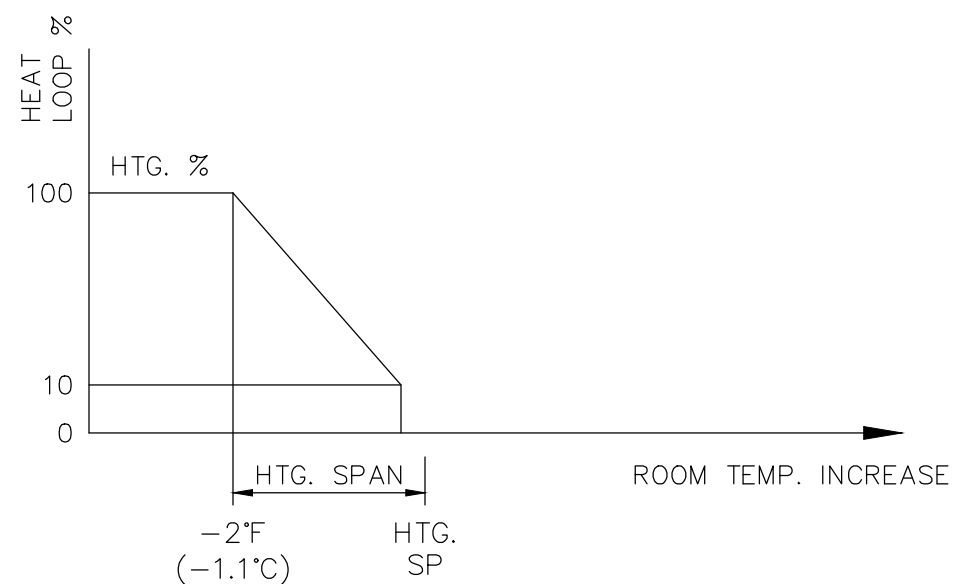

PARALLEL FAN POWERED AIR TERMINAL UNIT SERIES FAN OPERATION

REV. NO. 001	DWG. NO.
REV. DATE : 04-23-21	MP-023
DRAWN BY : RM	SCALE : NTS